

PRACHT®

ALPHA XT/XT+

(NRG1002 / NRG1012)

MANUAL

CONTENTS

NOTES ON THIS DOCUMENT	Fehler! Textmarke nicht definiert.
SAFETY, INSTALLATION AND USE.....	Fehler! Textmarke nicht definiert.
OTHER USE INSTRUCTIONS.....	2
SCOPE OF DELIVERY	3
TECHNICAL DATA.....	Fehler! Textmarke nicht definiert.
ASSEMBLY.....	Fehler! Textmarke nicht definiert.
REQUIREMENTS.....	5
WALL MOUNTING.....	5
ELECTRICAL CONNECTION.....	Fehler! Textmarke nicht definiert.
CONNECTION TO THE MAINS	6
WIRING OF THE RFID MODULE.....	Fehler! Textmarke nicht definiert.
SETTING THE MAXIMUM CURRENT	7
VALUES FOR ALPHA NRG1002 (MAX. 11KW PER VEHICLE).....	Fehler! Textmarke nicht definiert.
VALUES FOR ALPHA NRG1012 (MAX. 22KW PER VEHICLE).....	Fehler! Textmarke nicht definiert.
INITIAL COMMISSIONING.....	Fehler! Textmarke nicht definiert.
OPERATION.....	9
LED DISPLAY	9
RFID CARD TEACH-IN.....	10
RFID CARD DELETION	10
ACTIVATION OF THE WALLBOX.....	Fehler! Textmarke nicht definiert.
LOAD.....	Fehler! Textmarke nicht definiert.
SEQUENTIAL LOADING.....	Fehler! Textmarke nicht definiert.
RESTARTING THE BOX	11
INTERFACE RS 485.....	Fehler! Textmarke nicht definiert.
MAINTENANCE AND CLEANING.....	Fehler! Textmarke nicht definiert.
ENVIRONMENT.....	Fehler! Textmarke nicht definiert.
TROUBLESHOOTING.....	Fehler! Textmarke nicht definiert.
CONTACT ADDRESS	Fehler! Textmarke nicht definiert.

NOTES ON THIS DOCUMENT

Before installing and using the wallbox, the instructions must be read and understood in full by the installer and each user.

Please keep the manual for the entire service life of the wallbox in order to be able to access it later.

Also observe the operating instructions for your electric vehicle.

SAFETY, INSTALLATION AND USE

The wallbox is only suitable for use in private and semi-public areas (e.g. company parking lots).

The wallbox must not be installed in areas with an explosive atmosphere (EX area) or where flammable liquids or objects are stored.

The wallbox is only suitable for stationary installation. Minimum distances of 50cm to all neighboring objects must be maintained. Installation in a closed box is not permitted. Likewise, the wallbox must not be installed in areas at risk of flooding.

The wallbox may only be installed and put into operation for the first time by a trained electrician.

The electrical connection must be made in accordance with nationally applicable standards, as well as other national and international regulations regarding accident prevention and personal protection, as well as fire protection.

The wallbox may only be connected to and operated on TT, TN-C and TN-C-S networks. Operation on an IT network is not permitted.

Work on the wallbox may only be carried out when it is de-energized. There is a risk of fatal electric shock due to the components inside the box!

Modifications or conversions to the wallbox are not permitted and will result in the loss of any warranty and guarantee claims against the manufacturer.

The box and all associated components may only be used for their intended purpose. The manufacturer assumes no liability for personal injury or property damage resulting from improper use.

Defective or damaged wallboxes must not be put into operation. In this case, contact your installer.

Check the function of the RCD switch regularly in accordance with national regulations.

OTHER USE INSTRUCTIONS

- Vessels containing liquids must not be placed on the charging station
- Kinking or running over of the charging cable must be avoided
- The charging cable must be wound up on the device provided when the charging station is not in use
- When not in use, fix the charging coupler in the charging coupler holder provided.
- Before using the charging coupler, visually inspect it for damage or dirt on the contacts.

- The charging coupler must not be disconnected from the vehicle during the charging process. Das Einführen von Gegenständen in die Ladekupplung ist untersagt
- Do not wash the vehicle with a garden hose or high-pressure cleaner when the charging coupler is plugged in, in order to prevent water from entering the charging coupler or the vehicle's connection device.
- The vehicle must be parked at a suitable distance from the charging station to ensure that the charging cable can be plugged in without tension.
- Avoid direct sunlight
- Do not open an outdoor charging station during rain or snowfall.
- Do not connect the charging cable to extension cords or adapter cables
- Do not allow children to play unsupervised in the vicinity of the charging station
- The charging station must always be closed during operation
- The key for opening the charging station should be kept in a place to which unauthorized persons have no access
- For persons with a pacemaker or defibrillator, despite compliance with all European directives and standards on electromagnetic compatibility, no statement can be made about the suitability of use, maintenance or repair work of the charging station. Please contact the manufacturer of the defibrillator or pacemaker for further information.
- Improper use may result in serious injury or death, and may destroy the vehicle or the charging station.

SCOPE OF DELIVERY

- Wallbox ALPHA XT with RFID module and RS 485 interface
- Key
- Jumper, pre-assembled
- instruction manual
- drilling template
- Mounting material, consisting of:
 - 1x mounting bracket left
 - 1x mounting bracket right
 - 8x self-tapping screws for mounting tabs
 - 2 pieces RFID card (other cards available - NRG9003)

Check the scope of delivery for completeness.

TECHNICAL DATA

	ALPHA – NRG1002	ALPHA – NRG1012
Charging power mode 3 [kW] per output	3.7 (1-phase) / 11 (3-phase)	7.4 (1-phase) / 22 (3-phase)
Charging power mode 3 [kW] total	7.4 (1-phase) / 22 (3-phase)	7.4 (1-phase) / 22 (3-phase)
Rated voltage UN [V] 50Hz	230 (1-phase) / 400 (3-phase)	
max. line protection [A]	35	
Residual current protection/disconnecting device AC / DC [mA]	30/6	
max. current consumption [A] (adjustable)	10, 13, 16, 20, 24 or 32	
max. charging current [A] per vehicle	16	32
Protection type	IP 65	
Protection class	I	
Impact resistance box	IK08	
Number of charging ports	2	
Charging port/coupling	Typ 2	
Charging cable length [m]	5,5	
Mounting location	Indoor, protected outdoor, no direct sunlight	
Mounting type	Wall mounting, column mounting (optional)	
Ambient temperature	-20°C to +40°C for connected load < 11kW -25°C to +35°C with connected load > 11kW	
Altitude	max. 2000m a.s.l.	
Relative humidity [%]	max. 95 (non-condensing)	
Dimensions [mm] (W x H x D)	299 x 425 x 180 (without coupling) 299 x 425 x 380 (with coupling)	
Material	ABS, Aluminium	
Weight [kg]	11	
optionally available	NRG9000 - Stand with roof NRG9001 - Roof for mounting in unprotected outdoor area NRG9003 - RFID cards NRG9004 - Wall cable holder	

ASSEMBLY

REQUIREMENTS

The wallbox may only be installed by a trained electrician.

Before installation, the device must be thoroughly checked for damage.

The wallbox is only suitable for vertical installation.

The box may be mounted indoors or in protected outdoor areas, such as under canopies.

The ambient temperature at the installation site must be in the range of -20°C to +40°C.

The wallbox must be mounted away from easily flammable parts.

Sufficient ventilation must be ensured during operation.

The mounting location must be selected so that the connected charging cables cannot come into contact with water.

To prevent the ingress of water, the proper fit of the cover and the tight fit of the cable glands must be checked after installation.

WALL MOUNTING

1. The enclosed mounting plates (left/right) are to be mounted on the back of the wallbox with four self-tapping screws each. Make sure that the beveled tabs are oriented towards the center of the housing (cf. Figure 1).
2. The drilling distances for wall mounting are to be transferred to the wall with the aid of the enclosed drilling template.
3. Drill holes in the wall.
4. Insert four dowels (not included in the scope of delivery) according to the wall condition.
5. Screw the two lower screws into the dowels and place the wallbox on the screws using the screw holes.
6. Screw the upper screws into the dowels, align the wallbox and finally fasten it using the total of four screws.

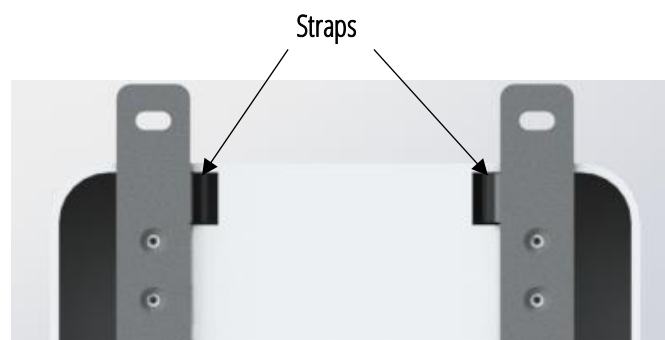


Figure 1 Arrangement of the mounting plates

The next step is the electrical connection of the wallbox.

ELECTRICAL CONNECTION

The supply line of the wallbox must be disconnected from the power supply during installation work.

CONNECTION TO THE MAINS

The supply line must be correctly fused.

1. pull the supply line into the box.
2. Connect the supply line as shown in Figure 2 and then relieve the strain and seal it using the cable gland.

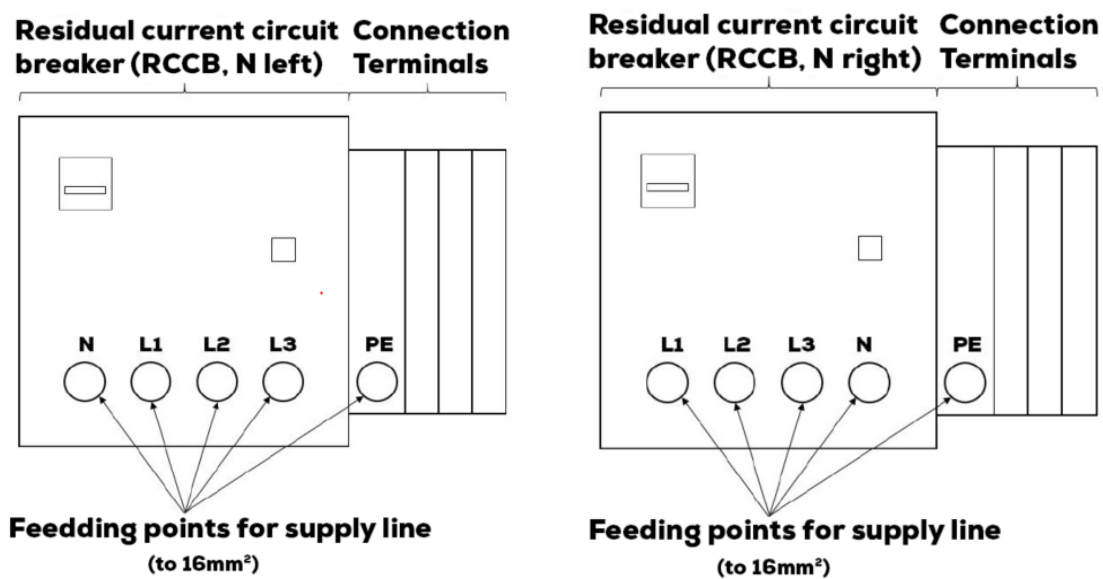


Figure 2 Connection position of the supply line

Check the electrical connection and voltages using a measuring device.

Also make sure that neutral (blue) and ground (PE, yellow/green) are connected correctly.

The sequence of L1, L2, L3, N may differ depending on the type. Please observe the imprint next to the connection terminals.

ATTENTION:

Switch off the RCD during insulation resistance tests (according to DIN VDE 0100-600) to avoid damage to the electronics!

WIRING OF THE RFID MODULE

When using RS485, a double cable with a characteristic impedance of 120 Ohm must be used. Since this is a data bus, it must be terminated with a resistor at the end or beginning. This can be done with the resistor pre-mounted in the interface or with the termination functions of other Modbus accessories. When using our PCC, it must always be mounted at the beginning or end of the bus as it has an integrated termination resistor. The GND connection must be carried on a separate wire (or pair of wires) in the cable to avoid interference effects.



Figure 3 Modbus cable connection

SETTING THE MAXIMUM CURRENT

It should be noted that the loading speed depends mainly on two factors:


1. amount of the maximum power output of the wallbox
2. maximum charging power of the electric vehicle

Preferably, the wallbox should be connected with three phases.

Before commissioning, the maximum current that the wallbox draws via the supply line must be set using the enclosed jumper on the control board.

When setting the maximum current, it must not be higher than the fuse or the cable cross-section and the length of the supply line allow.



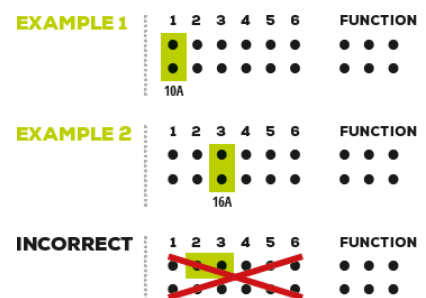



The setting is made by plugging the jumper into the corresponding position on the control unit. The slots on the control unit can be found by means of the inscription "I max". The assignment of the slots is shown in the following tables:



ATTENTION






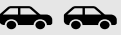
Slot 7 and 8 are not to be used!

VALUES FOR ALPHA NRG1002 (MAX. 11KW PER VEHICLE)

			1-PHASE LOADING			2-PHASE LOADING			3-PHASE LOADING		
											
Position connector (Jumper)	Current rating	Min. cross section supply line	(1 Ph supply line or only 1 Ph car)	(1Ph supply line, 1Ph car)		(3Ph supply line, 2Ph car)	(3Ph supply line, 2Ph car)		(3 Ph supply line, 3Ph car)	(3 Ph supply line, 3Ph car)	
1	10A	1,5 mm ²	2,3 kW	2,3 kW	0,0 kW	4,6 kW	4,6 kW	0,0 kW	6,9 kW	6,9 kW	0,0 kW
2	13A	1,5 mm ²	3,0 kW	1,6 kW	1,4 kW	6,0 kW	3,2 kW	2,8 kW	9,0 kW	4,8 kW	4,2 kW
3	16A	2,5 mm ²	3,7 kW	1,8 kW	1,8 kW	7,4 kW	3,7 kW	3,7 kW	11,0 kW	5,5 kW	5,5 kW
4	20A	4,0 mm ²	3,7 kW	2,3 kW	2,3 kW	7,4 kW	4,6 kW	4,6 kW	11,0 kW	6,9 kW	6,9 kW
5	24A	4,0 mm ²	3,7 kW	2,8 kW	2,8 kW	7,4 kW	5,5 kW	5,5 kW	11,0 kW	8,3 kW	8,3 kW
6	32A	6,0 mm ²	3,7 kW	3,7 kW	3,7 kW	7,4 kW	7,4 kW	7,4 kW	11,0 kW	11,0 kW	11,0 kW

Nach dem Ladeende eines Fahrzeugs entspricht die Leistung am anderen der Ladeleistung bei nur einem angeschlossenen Fahrzeug. Mit Toleranz +-10%

VALUES FOR ALPHA NRG1012 (MAX. 22KW PER VEHICLE)

			1-PHASE LOADING			2-PHASE LOADING			3-PHASE LOADING		
											
Position connector (Jumper)	Current rating	Min. cross section supply line	(1 Ph supply line or only 1 Ph car)	(1Ph supply line, 1Ph car)		(3Ph supply line, 2Ph car)	(3Ph supply line, 2Ph car)		(3 Ph supply line, 3Ph car)	(3 Ph supply line, 3Ph car)	
1	10A	1,5 mm ²	2,3 kW	2,3 kW	0,0 kW	4,6 kW	4,6 kW	0,0 kW	6,9 kW	6,9 kW	0,0 kW
2	13A	1,5 mm ²	3,0 kW	1,6 kW	1,4 kW	6,0 kW	3,2 kW	2,8 kW	9,0 kW	4,8 kW	4,2 kW
3	16A	2,5 mm ²	3,7 kW	1,8 kW	1,8 kW	7,4 kW	3,7 kW	3,7 kW	11,0 kW	5,5 kW	5,5 kW
4	20A	4,0 mm ²	4,6 kW	2,3 kW	2,3 kW	9,2 kW	4,6 kW	4,6 kW	13,8 kW	6,9 kW	6,9 kW
5	24A	4,0 mm ²	5,5 kW	2,8 kW	2,8 kW	11,0 kW	5,5 kW	5,5 kW	16,5 kW	8,3 kW	8,3 kW
6	32A	6,0 mm ²	7,4 kW	3,7 kW	3,7 kW	14,7 kW	7,4 kW	7,4 kW	22,0 kW	11,0 kW	11,0 kW

Nach dem Ladeende eines Fahrzeugs entspricht die Leistung am anderen der Ladeleistung bei nur einem angeschlossenen Fahrzeug. Mit Toleranz +-10%

Before commissioning, check that the jumper is seated correctly.

No settings are required to divide the charging current between two vehicles. The charging current is regulated by the controller.

Due to increased cable length of the supply line, it may also be necessary to compensate for the resulting voltage drop by using a larger cable cross-section.

INITIAL COMMISSIONING

1. before commissioning the wallbox, all vehicles must be disconnected from the system.
2. turn on the fuse in your house power box.
3. turn on the RCD switch located in the box.

The microcontroller now starts automatically. Within 2 seconds, the box reports the preselected settings by flashing all LEDs. The number of flashes provides information about the presetting. For example, if the LEDs flash ten times, the presetting is 10A. After successful commissioning, the red LED on the control board goes out. The green LED, on the other hand, lights up permanently.

4. the door must be locked with the enclosed triangular key.

If the red LED remains permanently lit, there is a fault in the system. In this case, the wallbox must not be put into operation.

OPERATION

This charging station is suitable for electrically charging one or two vehicles with type 2 charging couplings.

By programming an RFID card (see "Programming RFID cards"), charging is only possible for authorized persons. If no RFID card is programmed, the wallbox is freely accessible.

Pay attention to your safety when operating inside the wallbox and do not touch any live components. Also observe the operating instructions for your electric vehicle.

LED DISPLAY

The wallbox is equipped with a separate LED indicator light for each charging cable, which shows the current status during operation. Up to software V11 (see door inside)

LED-DISPLAY	DEVICE STATUS
green	No vehicle connected, wallbox ready for operation
blue	Box unlocked via RFID module
yellow	Vehicle connected, waiting state, charging process completed
green, slow flashing (fast)	Vehicle is charging (more than 16A available)
red, flashing	Charging cable has short circuit, plug very dirty
red, 2x flashing	CP signal not stable, connector dirty
red, 3x flashing	Diode in vehicle defective, plug dirty
3 seconds flashing pink	RFID card not known / all RFID cards successfully deleted
3 seconds white	RFID card was taught
yellow flashing	Total power of the box limited via digital interface
light blue flashing	Power of a charging point limited via digital interface
Red luminous	DC fault current >6mA, fault current sensor error or connection error (from V12 restart of ALPHA required)
Red and yellow flashing (from V12)	Ventilation requested by the vehicle therefore no charging allowed

Die LED-Anzeigeleuchten zeigen außerdem bei jedem Neustart der Box den eingestellten Stromverbrauch an.

TEACH-IN OF RFID CARDS

To use the RFID module, it is necessary to teach in at least one RFID card.

RFID cards are taught as follows:

1. open the wallbox with the key provided for this purpose.
2. press and hold the Learn button on the RFID module and place the card to be learned on the right outside of the wallbox. (see Figure 4) A taught-in RFID card is signaled by a white status LED of the wallbox.

In this way, up to 100 RFID cards, possibly also from third-party suppliers, can be taught.

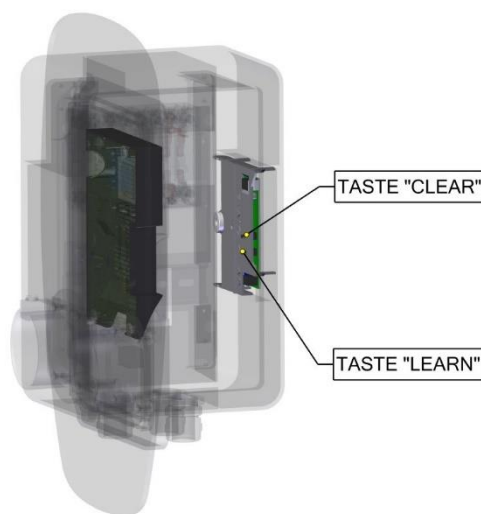


Figure 4 Control panel of the RFID module

DELETING RFID CARDS

Note: It is not possible to delete individual RFID cards. The deletion process removes all previously taught-in cards.

First open the wallbox with the key provided.

1. Start the deletion process by pressing and holding the Clear and Learn buttons on the RFID module until the LED indicator flashes pink. The memory has been successfully deleted. This process can take up to one minute. (see Figure 4)
2. lock the wallbox.

ACTIVATION OF THE WALLBOX

There are two ways to start the charging process or to unlock the wallbox.

Option 1

1. Place a taught-in RFID card on the right-hand outside of the wallbox. The wallbox signals the unlocking by a blue LED display.
2. Establish the connection between the wallbox and the vehicle to be charged within 30 seconds.

Option 2

1. First connect the wallbox to the vehicle to be charged.
2. Then unlock the wallbox by placing the RFID card on the right-hand side of the wallbox.

In this case, too, the blue LED indicator signals that the wallbox has been successfully unlocked.

In both cases, the charging process starts automatically.

Charging points to which no vehicle is connected are locked by the wallbox after 30 seconds.

As long as the connected vehicle is in the waiting or charging state, the connected charging point remains unlocked.

After completion of the charging process, the charging point in use is also locked.

LOAD

Connect your vehicle to the wallbox.

As soon as the electric vehicle is ready for charging, the charging process starts automatically.

After successful charging, the vehicle ends the charging process automatically. "Overcharging" is therefore not possible.

If two vehicles are charged at the same time, the wallbox regulates the available power. For example, the charging current is divided between the two vehicles. If the charging process of one of the two vehicles is completed, the charging power of the vehicle still charging is automatically increased.

SEQUENTIAL LOADING

Note: The time-delayed allocation of the charging current is not supported by all electric vehicles.

A charging current of at least 6A is required for each vehicle to be charged.

If the wallbox has been configured for a low charging current, this may mean that both vehicles cannot be charged at the same time. In this case, the two connected vehicles are charged one after the other (sequentially).

If the charging process of the second vehicle does not start automatically, it may be necessary to disconnect the vehicle from the system for a short time first. After reconnection, the charging process starts.

As a preventive measure, observe the connection sequence to the box. First connect the vehicle that does not support sequential charging. Only then connect the second vehicle (sequential charging is supported by this one).

RESTARTING THE BOX

To restart the box, first disconnect all vehicles from the system.

Switch off the internal FI of the wallbox for 5 seconds.

After switching on the voltage, the microcontroller of the box restarts automatically.

Within 2 seconds, the box signals the preselected setting by white flashing of the LEDs, for example, 10 flashes signal a preset of 10 amps.

INTERFACE RS 485

The RS 485 interface communicates with Modbus RTU, 9600 baud, 8 DATA bits, 1 stop bit, parity none, slave ID 1, unsigned integer 16bit (UINT16, internal values 8 bit). The timeout is less than 2000ms.

Register type 40XXX read and write, register type 30XXX read only.

Modbus address	Modbus register		Initial value	Values type												
0	40001	Modbus ID	1													
1	40002	Modbus baud rate	96	(equivalent to 9600)												
2	40003	max. current total limit	255	in A (values below 6 A lead to shutdown)												
3	40004	max. current KFZ1 limit	255	in A (values below 6 A lead to shutdown)												
4	40005	max. current KFZ2 limit	255	in A (values below 6 A lead to shutdown)												
11	30012	Allocated current KFZ1	0	in A												
12	30013	Allocated current KFZ2	0	in A												
74	30075	taught RFID cards (number)	255													
100	30101	Software version RFID and Modbus module	255	Decimal value Software version (D3 -> "3")												
101	30102	Software Version Hauptplatine	255	Software version motherboard												
102	40103	Release register charge points		<table border="1"> <tr> <td>1</td> <td>Share all</td> </tr> <tr> <td>2</td> <td>Lock all</td> </tr> <tr> <td>11</td> <td>Enable charging point 1</td> </tr> <tr> <td>21</td> <td>Lock charging point 1</td> </tr> <tr> <td>12</td> <td>Enable charging point 2</td> </tr> <tr> <td>22</td> <td>Lock charging point 2</td> </tr> </table> <p>Automatic locking occurs ~30 seconds after release! (Register available from software D2)</p>	1	Share all	2	Lock all	11	Enable charging point 1	21	Lock charging point 1	12	Enable charging point 2	22	Lock charging point 2
1	Share all															
2	Lock all															
11	Enable charging point 1															
21	Lock charging point 1															
12	Enable charging point 2															
22	Lock charging point 2															
103	30104	Temperature in the box	255	$(\text{value register} - 72) * 0.4244 = \text{Temp in } ^\circ\text{C}$												
106	30107	Status car 1	255	0 no car, 1 car connected, 2 charging request, 3 charging request with fan, 4 short circuit												
107	30108	Status car 2	255	0 no car, 1 car connected, 2 charging request, 3 charging request with fan, 4 short circuit												
114	30115	Set charging current Supply line	255	Value in A of the jumper position												
115	30116	Set charging current Supply line after corrections Temperature and setting	255	Value in A that is available for all connected vehicles in total.												

116	30117	Lock status display	0	0 (0b00)	Box released
				1 (0b01)	Charging point 1 locked
				2 (0b10)	Charging point 2 locked
				3 (0b11)	Both charging points locked

Information about RFID cards can be requested depending on the software version at support@pracht.com.

MAINTENANCE AND CLEANING

In the event of a defect, please contact the manufacturer directly.

Before cleaning, the wallbox must be disconnected from the power supply for safety reasons.

Dirt can be removed with a damp cloth.

The use of harsh cleaning agents is not permitted.

The wallbox must not be cleaned with a water jet or high-pressure cleaner.

ENVIRONMENT

Disposal of the packaging material is carried out via the collection containers for paper and plastics provided for your region.

The disposal of old devices and their accessories is carried out in accordance with the national and regional regulations for the disposal of electrical and electronic devices. Accordingly, these must not be disposed of with household or bulky waste.

TROUBLESHOOTING

ERROR PICTURE	ACTION
No function of the wallbox (LEDs extinguished).	<ul style="list-style-type: none"> • Check the fuses in the house distribution. • Check the residual current circuit breaker (FI) in the house distribution. • Check the internal fuses. • Check the internal residual current circuit breaker (FI).
Wallbox no longer responds.	<ul style="list-style-type: none"> • First disconnect all vehicles from the system. Then restart the wallbox.
The wallbox signals a fault (red LED display).	<ul style="list-style-type: none"> • Disconnect the connection to the vehicle. • Check the charging coupling and charging cable for possible damage. • In case of damage, disconnect the box from the power supply and repair it. • Check the contacts of the charging coupler for dirt. To do this, disconnect the box from the power supply. • After repair or cleaning, the wallbox can be connected to the mains. Once the fault has been rectified, the box is ready for operation.
The vehicle suddenly charges with lower charging current or briefly interrupts the charging process.	<ul style="list-style-type: none"> • The wallbox is equipped with thermal overload protection. From around 40°C outside temperature, the system gradually reduces the maximum charging current. If the ambient temperature continues to rise, the wallbox may switch off the charging process. As the outside temperature decreases, the wallbox automatically continues the charging process.
The loading process was canceled.	<ul style="list-style-type: none"> • Restart the charging process. To do this, disconnect the connection between the wallbox and the vehicle for 10 seconds.

CONTACT ADDRESS

PRACT Industry GmbH
 Am Seerain 3, 35232 Dautphetal-Buchenau, Germany
 Tel. +49 6466 9140-900
info@prachtenergy.com, www.prachtenergy.com